

Design Engineering, Inc.

604 Moore Road
Avon Lake, OH 44012



THERMAL TUNING PRODUCTS

Installation Instructions

DEI Cool Cover™ Air Tube Kit

PART NO. 010417

KIT CHECKLIST	
1	Air Tube Reflective Wrap
1	Strip of Reflective Tape


NOTE
It may be necessary to cut wrap for proper length. You will need a sharp knife, razor, or scissors, with straight edge.

DIRECTIONS

- 1 - 1- Disconnect and remove air tube from engine bay (if installed on vehicle) for ease
- 2 - 2- First wrap Cool Cover around air tube to determine proper length and fitment.
- 3 - 3- After determining appropriate length of Cool Cover, mark where to trim.
- NOTE Be sure to take note of the location of any emission or vacuum lines in air tube or manifold.
- 4 - As an aesthetics option, use DEI Cool Tape or reflective tape to accent Cool Cover (if applicable).
- 5 - Simply apply measure length of tape needed, apply to edge and fold over to opposite edge.
- 6 - Next match up Velcro stripes and secure.
- 7 - Reinstall air tube and connect emission and vacuum lines and secure to brackets (if applicable).

Design Engineering, Inc.

604 Moore Road
Avon Lake, OH 44012

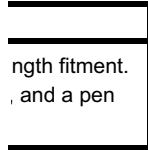

of installatic

ounting brac
edges.
ie side for a

: